

Limited Warranty

This product is guaranteed against defects in material and workmanship for **12 months** from the date of purchase, under normal usage.

The guarantee **DOES NOT APPLY** in case of improper use, negligence, lack of maintenance or accidental damage to the pump. If the pump fails due to a manufacturing fault within this period it will be either repaired or replaced free of charge. Moving parts or wearable parts including the impeller and any washers or O rings are not covered by the guarantee.

Should your Bermuda product stop working refer first to trouble shooting and if this does not help, return the product to the place of purchase.

Liability is limited to replacement of the faulty product only. No other costs will be reimbursed. This guarantee is not transferable and does not affect your statutory rights.

Do not attempt to tamper with or access electrical components inside the pump body. Doing so will invalidate the warranty.

The manufacturer or supplier shall not be responsible, or held liable for any damages caused by defective components or materials of this product, or for loss incurred by interruption of service, or any consequential/incidental damages and expenses arising from the production, sale use or misuse of this product or any other consequential loss.

Any warranty claim must be accompanied by a valid, dated proof of purchase. Evolution Aqua, Bermuda, its distributors and dealers shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this product.

The installation and use of your product outside of our recommendations as printed in this manual may also void the warranty.



www.bermudawatergardens.com

BERMUDA an Evolution Aqua brand. Evolution House, Kellet Close, Wigan, Lancashire, WN5 0LP
DISTRIBUTED BY: Certikin International Ltd, Unit 4 Tungsten Park, Colletts Way, Witney, OX29 0AX


The logo for BERMUDA, featuring the word "BERMUDA" in a bold, white, sans-serif font. The letter "M" is stylized with a white triangle pointing downwards, creating a central void. The logo is set against a black, wavy-edged rectangular background.

BERMUDA

Water Feature Submersible Pump

Instruction Manual

This pump has been carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in this manual may result in pump damage and/or serious injury. Be sure to read and save this manual for future reference.

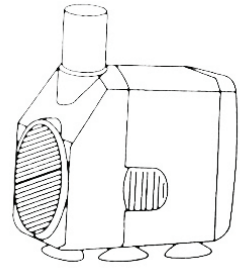

WARNING

1. Only use the pump with a voltage input as shown on the pump.
2. Do not pump flammable liquids.
3. To reduce the risk of electrical shock, use only on portable self-contained fountains no larger than 1.5m in any dimension.
4. Do not use the pump in a water depth of over 1.5m.
5. Do not use when water temperature is above 35° C.
6. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

CAUTION

- Always disconnect from electrical outlet before handling the pump.
- Don't operate without water.
- Do not lift the pump by the power cord.
- Operate in freshwater only.
- Pump must be completely submerged with water during operation to prevent overheating.
- Not for use in swimming pools.
- This product must not be disposed together with domestic waste. This product must be disposed at an authorised recycling centre for electrical and electronic appliances.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce the performance of the pump.

If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the flow control lever on the side of the pump or restrict the discharge flow.


Do not let the pump run when not submerged in water. Doing so may damage the pump. Always submerge the pump first, before turning the pump on. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please turn the pump off and on several times, until the pump primes itself and begins to work.

The pump should be connected to a residual current device (RCD) with a rated residual operating current not exceeding 30mA.

MAINTENANCE

To clean the pump, remove the back cover and the impeller.

Use a small brush or stream of water to remove any debris.

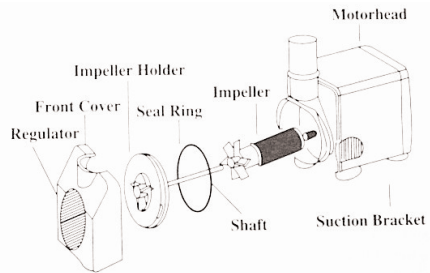

CAUTION: The pump shaft can not be removed.

IF THE PUMP FAILS TO OPERATE, CHECK THE FOLLOWING:

1. Check the circuit breaker and try another outlet to ensure the pump is getting electrical power. NOTE: Always disconnect from electrical outlet before handling the pump.
2. Check the pump discharge and tubing for kinks and obstructions. Algae build up can be flushed out with a garden hose.
3. Check the inlet to ensure it is not clogged with debris.
4. Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
5. Monthly maintenance will add to your pump's life.

NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop" This will prevent water from running down the cord into the electrical outlet.